

## Samsung – Change the date & time

DCS/Compact 1 & 2/816

From an LCD display phone only

1. Leave the handset down
2. Press “TRSF” 200
3. Enter Passcode “1234”
4. “Speaker” 505
5. Display shows: New:Wmmddyy: Hhmm
6. Enter new details as follows:

W	=	Day of the week (1 – 7) with 1 being Monday
Mm	=	Month (1 – 12)
Dd	=	Day of the Month (1 – 31)
Yy	=	Last 2 digits of the year
Hhmm	=	Time in 24 hour format