

HOW TO CHANGE TIME AND DATE ON LG IPLDK SYSTEMS

Programming has to be carried out from the attendant keyset

1. Dial 0 to locate the Attendant keyset
2. From the attendant keyset press " Trans / PGM
3. Dial 0, 4,1
4. Press Hold / Save
5. Enter time (HH:MM) - note the display does not show changes
6. Press Hold / Save