

# ***SAMSUNG DCS***

**SYSTEM ADMINISTRATOR**

**USER GUIDE**

## ***TO SET/CHANGE TIME AND DATE***

### **FROM AN LCD MODEL ONLY**

1. Leave The Handset Down
2. Press **TRSF 200**
3. **12341**
4. Press **Speaker 505**
5. Display Shows, New: Wmmddy: Hhmm
6. Enter New Details As Follows:

W = Day Of The Week (1 Through 7)  
Week Begins with Monday and ends on Sunday

Mm = Month (01 Through 12)

Dd = Day Of The Month (01 Through 31)

Yy = Last Two Digits Of The Year

Hhmm = Time (Use 24 Hour Clock)

7. Press **TRSF** to Store and Exit

## ***TO PROGRAM USERNAMES***

1. Leave Handset Down
2. Press **TRSF 200**
3. **12341**
4. Press **Speaker 104**
5. Enter The Extension Number To Be Changed In The Brackets  
  
(To Delete An Existing Name Press **HOLD**)
6. Enter The Name Using The Keypad  
The Volume + And – Keys Move The Cursor From Left To Right
7. Press **TRSF** To Store And Exit.

## ***SYSTEM SPEED DIALS (500 TO 999)***

### **TO STORE NUMBERS:**

With handset down

1. Press **TRSF 200**
2. **12341**
3. Press **Speaker 705**
4. Enter the speed dial number 500 ~ 999
5. Enter **9** and the telephone number to be stored
6. Press the 3<sup>rd</sup> key under the display to store
7. Enter the next number, 501,502,503... and continue as above.
8. Press **TRSF** to exit

**(Hold** - will delete a previous entry.)

### **To store names:**

1. With the handset down
2. Follow steps 1 and 2 above
3. Press **Speaker 706**
4. Enter the speed dial number to name
5. Type in the name using the keypad  
use the volume keys to move the cursor forward and back
6. Press the 3<sup>rd</sup> key under the display to store
7. TRSF to exit

THE FOLLOWING SPECIAL CHARACTERS CAN BE FOUND UNDER THE NUMBER KEYS:

DIAL 0 FOR: . ) 0

DIAL 1 FOR: SPACE ? , ! 1

DIAL \* FOR: : = [ ] \*

AND THE # KEY GIVES YOU ALL THE FOLLOWING:

# SPACE & ! : ? , % \$ - / =

[ ] @ ^ ( ) \_ + { } | ;

\ " ~

NOTE ; WHEN THE CHARACTER YOU WANT APPEARS ON THE SAME DIAL PAD KEY AS THE PREVIOUS CHARACTER PRESS VOLUME + TO MOVE THE CURSOR ONE SPACE TO THE RIGHT.

# Memory

500	550
501	551
502	552
503	553
504	554
505	555
506	556
507	557
508	558
509	559
510	560
511	561
512	562
513	563
514	564
515	565
516	566
517	567
518	568
519	569
520	570
521	571
522	572
523	573
524	574
525	575
526	576
527	577
528	578
529	579
530	580
531	581
532	582
533	583
534	584
535	585
536	586
537	587
538	588
539	589
540	590
541	591
542	592
543	593
544	594
545	595
546	596
547	597
548	598